


# Installation Instructions

## Flexible Corner Guards

### Important

1. Acclimate materials 24 hrs before installation. Maintain temperature-controlled environment after installation
2. Install in accordance with manufacturer's installation instructions. Failure to do so will void the warranty.

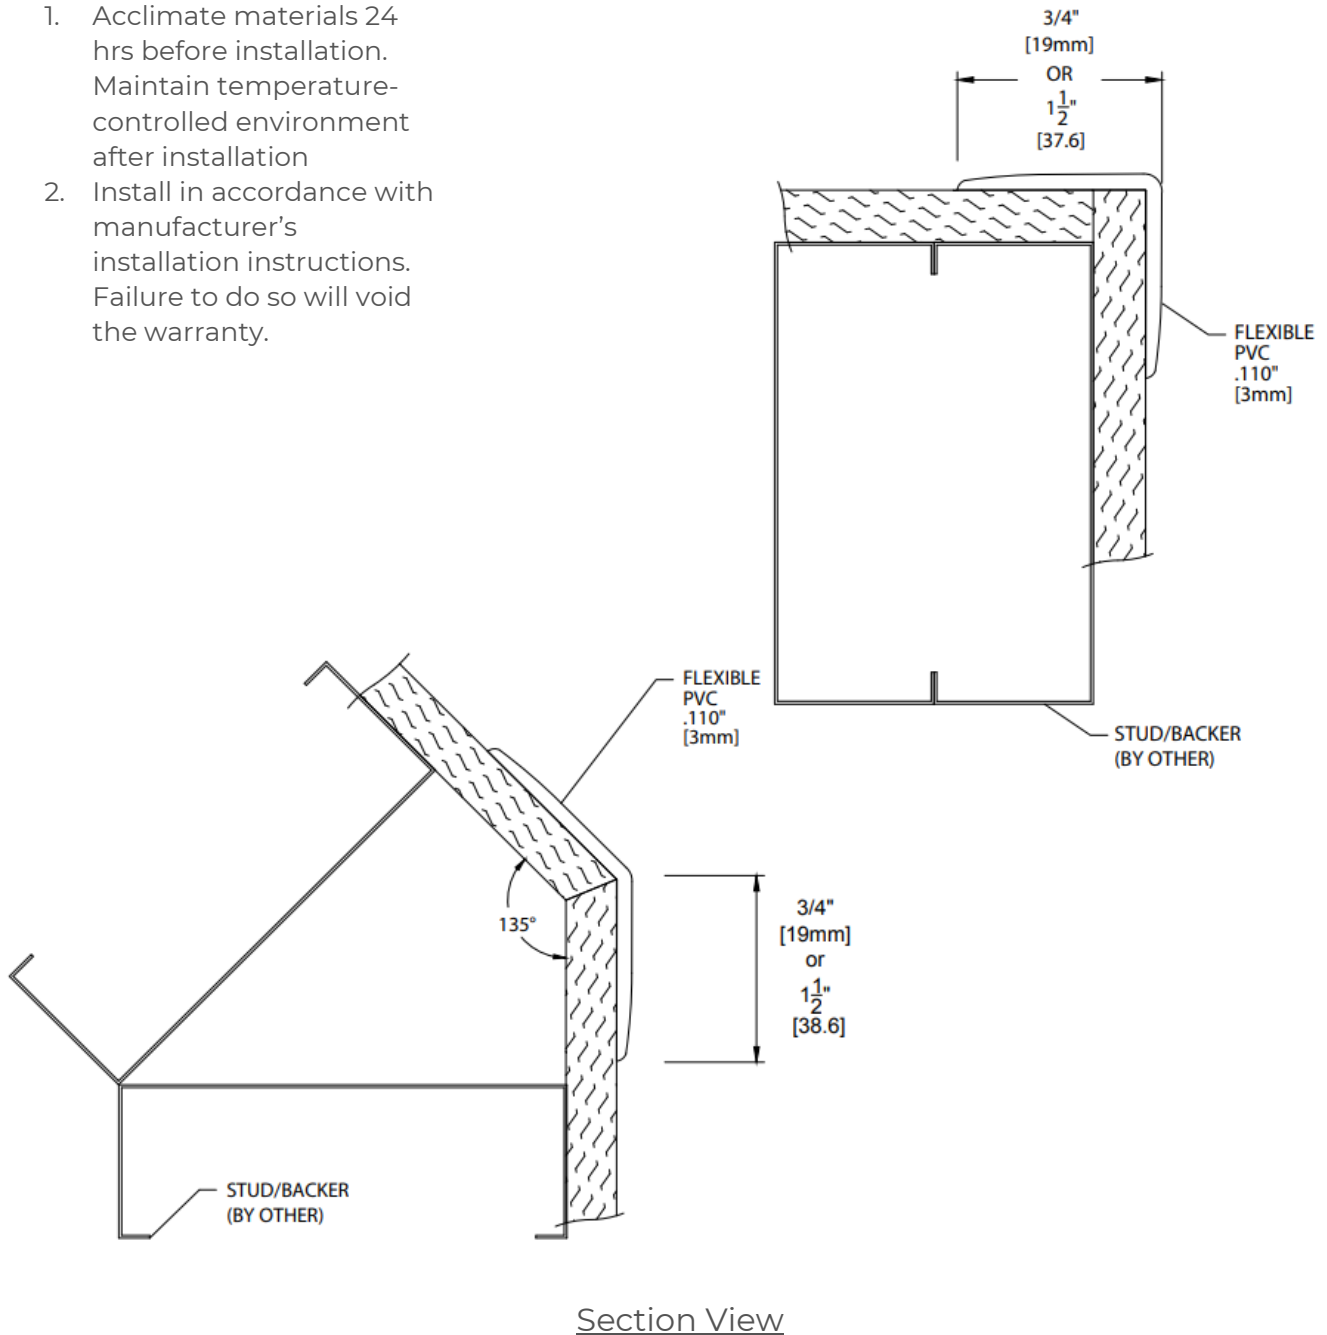

### Recommended Tools


Safety Glasses, Tape Measure, Level, Power Mitre Saw, 10" Blade with 60-80 Carbide Tipped Teeth

# Installation Instructions

## Flexible Corner Guards

---

### Components and Fasteners

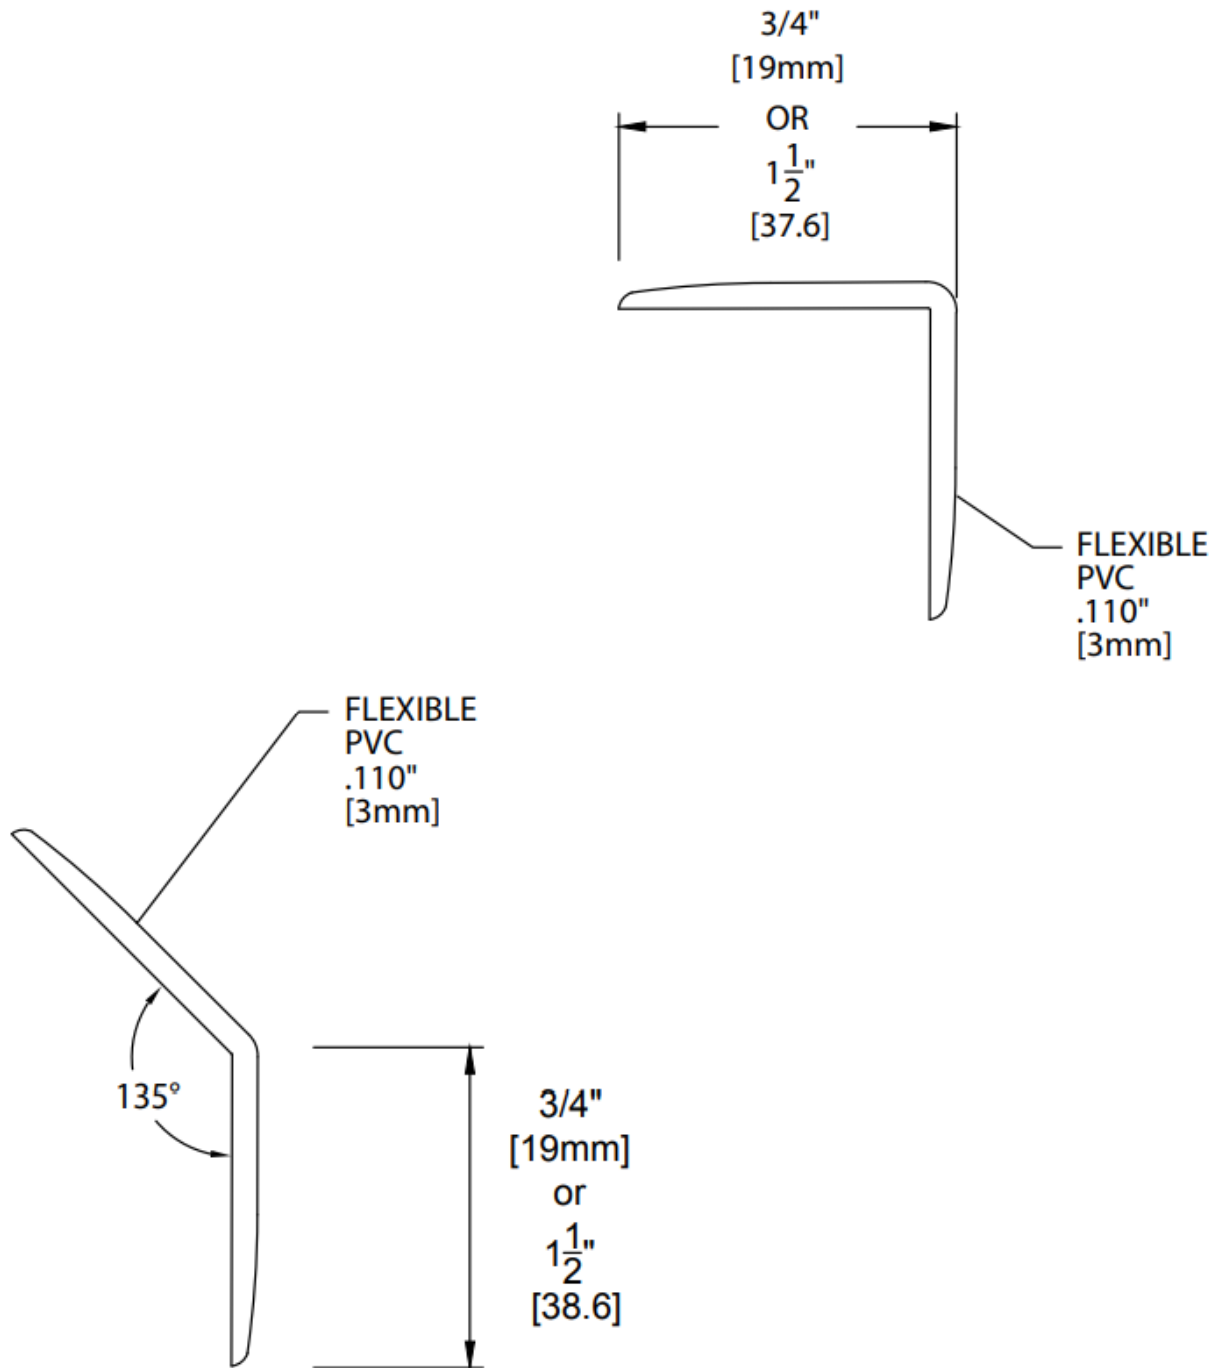


SHOWN AT 1 1/2"

# Installation Instructions

## Flexible Corner Guards

---

### Exploded View assembly

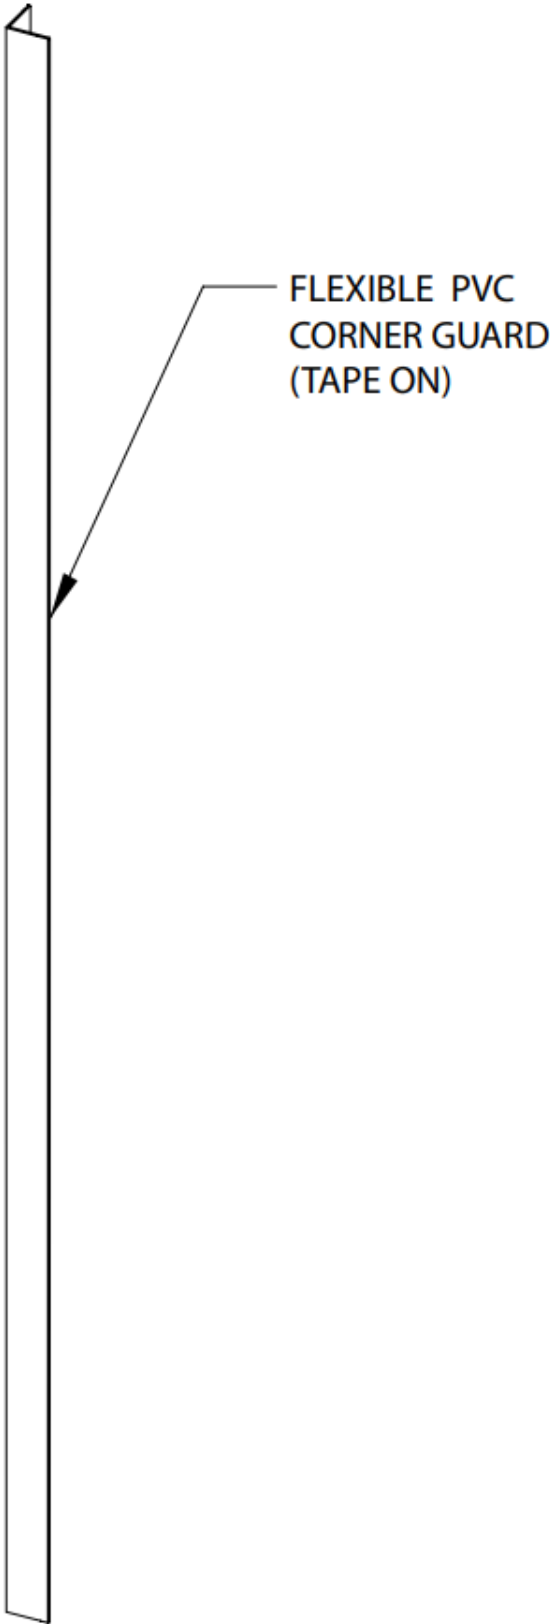

# Installation Instructions

## Flexible Corner Guards

FIG. 1a


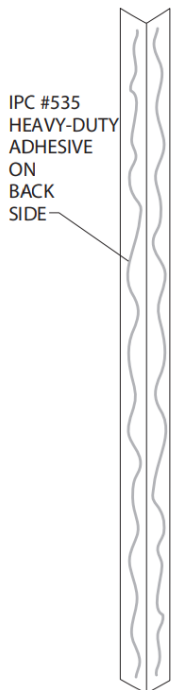


FIG. 1b

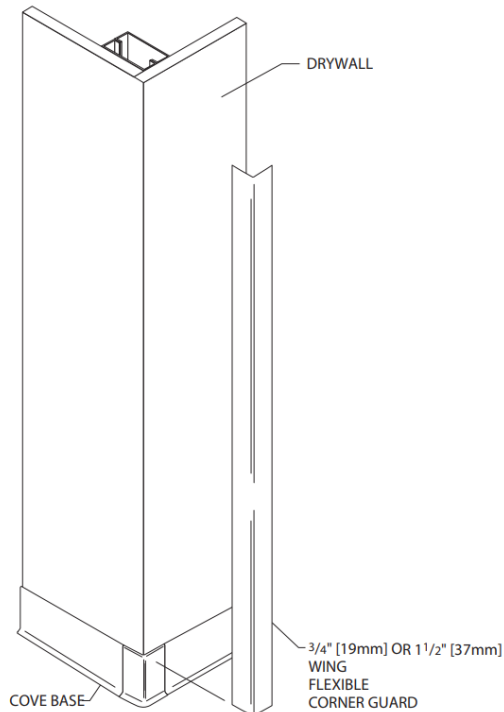

Please read all instructions before installing corner guards.

Material must be stored, installed and used in environmentally controlled conditions.

1. Prior to installation:
  - a. Allow corner guards to reach room temperature before installing.
  - b. The wall surface that the corner guards are to be applied must be dry and free of dirt, dust, oil, loose pain, wax and grease.
2. Use IPC #535 Heavy-Duty Adhesive to adhere corner guards. Apply a bead of IPC #535 in a zig-zag pattern over the back of the corner guard. See Figure 1a. Immediately position corner guard on the wall and apply pressure until a tight fit is achieved. An extension roller will aid this step. Additional bracing may be required during installation to insure complete contact with the wall. See Figure 1b.

Adhesive Coverage: One 10.6 oz cartridge of IPC #535 Heavy-Duty Adhesive will adhere the following corner guards based on an approximate cover of 70 lf per cartridge

Wing Size	Height	# of Corner Guards per cartridge
19mm, 38mm	914mm	11
19mm, 38mm	1220mm	8
19mm, 38mm	2440mm	4
19mm, 38mm	2743mm	3
19mm, 38mm	3660mm	3