Installation Instructions

Flexible Wall Guards

Please read all instructions before installing wallguard.

ITEM DESCRIPTION

Cartguard 1

MB10 1" [25.4mm] Mounting Base, 8' [2.4M]
MB10HB Hook Mounting Base
MT15FX 1" [25.4mm] Flexible Top - 72' [21.9M] coil or 8' [2.4M] length
ME10 Snap-on End Cap
MC10 Snap-on 90˚ Outside Corner
MC1045 Snap-on 135˚ Outside Corner
MC10CC Snap-on Custom Angle Corner
ME10DS Quick Stop End Cap

Cartguard 2

MB20 2" [50.8mm] Mounting Base, 12' [3.7M]
MT25FX 2" [50.8mm] Flexible Top - 72' [21.9M] coil or 12' l[3.7M] ength
ME20 Snap-on End Cap
MC20 Snap-on 90˚ Outside Corner
MC2045 Snap-on 135˚ Outside Corner
MC20CC Snap-on Custom Angle Corner
ME20DS Quick Stop End Cap

Material must be stored, installed and used in environmentally controlled conditions

Cartguard 1

[1] Cut the retainer to the required length allowing for end caps, 90˚ outside corners, 135˚ outside corners and snap-on end caps.
[2] Attach the retainer to the substrate with #8 sheet metal screws, using the pre-drilled holes on the retainer. Screw length is determined by the substrate thickness.
[3] Snap ends caps and corners on to the retainer and attach them with installer supplied #8 sheet metal screws.
[4] Cut the flexible vinyl retainer to the distance between the end caps and corners.
[5] Snap the flexible vinyl onto the retainer.

Cartguard 2

[1] Cut the retainer to the required length allowing for end caps, 90˚ outside corners, 135˚ outside corners and snap-on end caps.
[2] Attach the retainer to the substrate with #8 sheet metal screws every 12" [304.8mm] Screw length is determined by the substrate thickness.
[3] Snap ends caps and corners on to the retainer and attach them with installer supplied #8 sheet metal screws.
[4] Cut the flexible vinyl retainer to the distance between the end caps and corners. [
[5] Snap the flexible vinyl onto the retainer.


inpro | ACCULINE
Inpro Engineered. Acculine Adapted.

135-139 Northcorp Blvd, Broadmeadows VIC 3047
03 9334 5911
acculine.com.au

Installation Instructions

Flexible Wall Guards

Please read all instructions before installing wallguard.

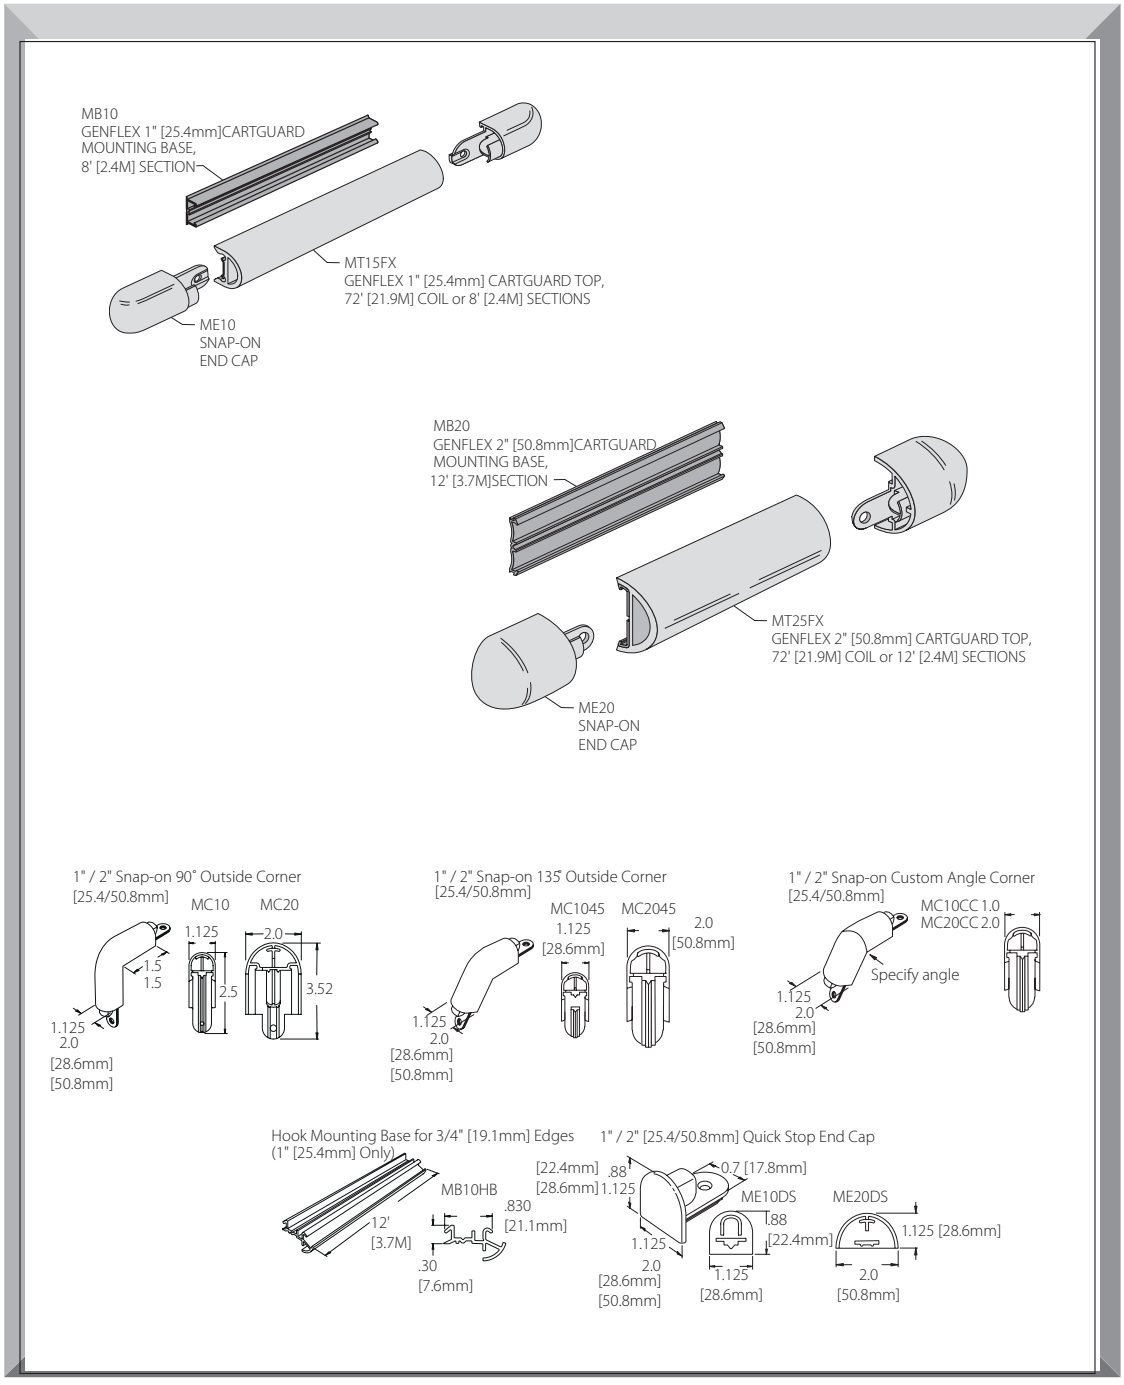

inpro. | ACCULINE
Inpro Engineered. Acculine Adapted.

135-139 Northcorp Blvd, Broadmeadows VIC 3047
03 9334 5911
acculine.com.au